


LIGHT SKY®

广州市升龙灯光设备有限公司
FLY DRAGON LIGHTING EQUIPMENT CO.,LTD

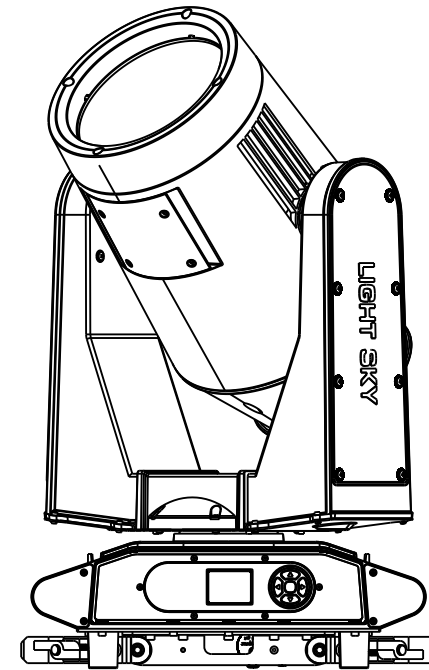

AQUABEAM400LL-E

使用说明书 USER MANUAL

Please read these user manual carefully before use!
使用前请仔细阅读本产品使用说明书!

LIGHT SKY®

Tel:0086-20-61828288

Fax:0086-20-61828188 Pc:510800

Web:www.lightsky.com.cn

E-mail: flydragon@lightsky.com.cn

asia@lightsky.com.cn

india@lightsky.com.cn

europa@lightsky.com.cn

latinamerica@lightsky.com.cn

middle-east@lightsky.com.cn

american@lightsky.com.cn

Address: No. 43, Yunfeng Road, Xiuquan Street,
Huadu District, Guangzhou, China

地址: 广州市花都区秀全街云峰路43号



LIGHT SKY®



CHANNEL FUNCTION(V1.0)/ 通道功能

通道	DMX	百分比	功能	备注
1			Colour/颜色	
			Colour/颜色	
	0-4	0-1.56	White/白光	
	5-8	1.96-3.14	White+Red/白光+红色	
	9-12	3.53-4.71	Red/红色	
	13-17	5.10-6.67	Red+Orange/红色+橙色	
	18-21	7.06-8.24	Orange/橙色	
	22-25	8.63-9.80	Orange+Aquamarine/橙色+碧绿色	
	26-29	10.2-11.4	Aquamarine/碧绿色	
	30-34	11.8-13.3	Aquamarine+Green/碧绿色+深绿色	
	35-38	13.7-14.9	Green/深绿色	
	39-42	15.3-16.5	Green+Light Green/深绿色+绿色	
	43-46	16.9-18.0	Light Green/绿色	
	47-51	18.4-20.0	Light Green+Lavender/绿色+浅紫色	
	52-55	20.4-21.6	Lavender/浅紫色	
	56-59	22.0-23.1	Lavender+Pink/浅紫色+粉红色	
	60-63	23.5-24.7	Pink/粉红色	
	64-68	25.1-26.7	Pink+Yellow/粉红色+黄色	
	69-72	27.0-28.2	Yellow/黄色	
	73-76	28.6-29.8	Yellow+Magenta/黄色+品红色	
	77-81	30.2-31.8	Magenta/品红色	
	82-85	32.2-33.3	Magenta+Cyan/品红色+青色	
	86-89	33.7-34.9	Cyan/青色	
	90-93	35.3-36.5	Cyan+CT0 260/青色+CT02	
	94-98	36.9-38.4	CT0 260/CT02	
	99-102	38.8-40.0	CT0 260+CT0 190/CT02+CT01	
	103-106	40.4-41.6	CT0 190/CT01	
	107-110	42.0-43.1	CT0 190+CTB 8000/CT01+CTB	
	111-115	43.5-45.1	CTB 8000/CTB	
	116-119	45.5-46.7	CTB 8000+Blue/CTB+深蓝色	
	120-123	47.1-48.2	Blue/深蓝色	
	124-127	48.6-49.8	Blue+White/深蓝色+白光	
	128-191	50.2-74.9	CCW, Fast→Slow Rotation/由快到慢, 逆时针旋转	
	192-255	75.3-100	CW, Slow→Fast Rotation/由慢到快, 顺时针旋转	
2			Strobe/频闪	
	0-3	0-1.2	Closed/关闭	
	4-103	1.6-40.4	Slow-Fast Strobe/由慢到快频闪	
	104-107	40.8-42.0	Open/开光	
	108-157	42.4-61.6	Opening pulses in sequences from slow fast/由慢到快, 快关慢开	
	158-207	62.0-81.2	Closing pulses in sequences from fast slow/由慢到快, 快开慢关	
	208-212	81.6-83.1	Open/开光	
	213-251	83.5-98.4	Random Slow-Fast Strobe/由慢到快随机频闪	
	252-255	99.8-100	Open/打开	
3	0-255	0-100	Dimmer/调光	

通道	DMX	百分比	功能	备注
4			Gobo/图案	
	0-3	0-1.2	White/白光	
	4-7	1.6-2.7	Gobo1/图案1	
	8-11	3.1-4.3	Gobo2/图案2	
	12-15	4.7-5.9	Gobo3/图案3	
	16-19	6.3-7.5	Gobo4/图案4	
	20-23	7.8-9.0	Gobo5/图案5	
	24-27	9.4-10.6	Gobo6/图案6	
	28-31	11.0-12.2	Gobo7/图案7	
	32-35	12.5-13.7	Gobo8/图案8	
	36-39	14.1-15.3	Gobo9/图案9	
	40-43	15.7-16.9	Gobo10/图案10	
	44-47	17.3-18.4	Gobo11/图案11	
	48-51	18.8-20.0	Gobo12/图案12	
	52-55	20.4-21.6	Gobo13/图案13	
	56-59	22.0-23.1	Gobo14/图案14	
	60-69	23.5-27.1	Gobo1 Shake Slow-Fast Speed/图案1由慢到快摆动	
	70-79	27.5-31	Gobo2 Shake Slow-Fast Speed/图案2由慢到快摆动	
	80-89	31.4-34.9	Gobo3 Shake Slow-Fast Speed/图案3由慢到快摆动	
	90-99	35.3-38.8	Gobo4 Shake Slow-Fast Speed/图案4由慢到快摆动	
	100-109	39.2-42.7	Gobo5 Shake Slow-Fast Speed/图案5由慢到快摆动	
	110-119	43.1-46.7	Gobo6 Shake Slow-Fast Speed/图案6由慢到快摆动	
	120-129	47.1-50.6	Gobo7 Shake Slow-Fast Speed/图案7由慢到快摆动	
	130-139	51-54.5	Gobo8 Shake Slow-Fast Speed/图案8由慢到快摆动	
	140-149	54.9-58.4	Gobo9 Shake Slow-Fast Speed/图案9由慢到快摆动	
	150-159	58.8-62.4	Gobo10 Shake Slow-Fast Speed/图案10由慢到快摆动	
	160-169	62.7-66.3	Gobo11 Shake Slow-Fast Speed/图案11由慢到快摆动	
	170-179	66.7-70.2	Gobo12 Shake Slow-Fast Speed/图案12由慢到快摆动	
	180-189	70.6-74.1	Gobo13 Shake Slow-Fast Speed/图案13由慢到快摆动	
	190-199	74.5-78	Gobo14 Shake Slow-Fast Speed/图案14由慢到快摆动	
	200-225	78.4-88.2	Fast-Slow Rotation/由快到慢顺时针旋转	
	226-229	88.6-89.8	Stop/停止	
	230-255	90.2-100	Slow-Fast Rotation/由慢到快逆时针旋转	
5			Prism/棱镜选择	
	0-63	0-24.7	Unused Range/不在使用范围	
	64-127	25-49.8	Prism1/棱镜1	
	128-191	50.2-74.9	Prism2/棱镜2	
	192-255	75.3-100	Prism1+Prism2/棱镜1+棱镜2	
6			Prism Rotation/棱镜自转	
	0	0	Unused Range/不在使用范围	
	1-63	0.4-24.7	角度线性调节	
			三种棱镜效果选择：设置棱镜（棱镜1、棱镜2或棱镜1+2）在第5通道；	
	64-127	25.1-49.8	CCW, Fast → Slow/由快到慢，逆时针旋转	
6	128-191	50.2-74.9	CW, Slow → Fast/由慢到快，顺时针旋转	

通道	DMX	百分比	功能	备注
	192-207	75.3-81.2	由慢到快，90° 来回旋转	
	208-223	81.6-87.5	由慢到快，180° 来回旋转	
	224-239	87.8-93.7	由慢到快，270° 来回旋转	
	240-255	94.1-100	由慢到快，360° 来回旋转	
7			Prism Macro/棱镜宏	
	0-15	0-5.9	Unused Range/不在使用范围	
	16-55	6.3-21.6	由快到慢，8棱镜自由切换	
	56-95	22.0-37.3	由快到慢，16棱镜自由切换	
	96-135	37.6-52.9	由快到慢，8棱镜+16棱镜同时自由切换	
	136-175	53.3-68.6	由快到慢，8棱镜选中+16棱镜自由切换	
	176-215	69.0-84.3	由快到慢，16棱镜选中+8棱镜自由切换	
	216-255	84.7-100	由快到慢，8棱镜与16棱镜互锁切换	
8	0-255	0-100	Frost/雾化	
9	0-255	0-100	Focus/调焦	
10	0-255	0-100	Pan/水平	
11	0-255	0-100	Pan Fine/水平微调	
12	0-255	0-100	TILT/垂直	
13	0-255	0-100	TILT Fine/垂直微调	
14			Function/功能	
	0-25	0-9.8	Unused Range/不在使用范围	
	26-30	10.2-11.8	Effects Reset/头部电机复位	
	31-35	12.2-13.7	PAN/TITL Reset/XY轴复位	
	36-40	14.4-15.7	Complete Reset/整机复位	
	41-180	16.1-70.6	Unused Range/不在使用范围	
	181-200	71.0-78.4	Lamp OFF/关闭灯泡	
	201-220	78.8-86.3	Unused Range/不在使用范围	
	221-255	86.7-100	Lamp ON/打开灯泡	