


LIGHT SKY®

广州市升龙灯光设备有限公司
FLY DRAGON LIGHTING EQUIPMENT CO.,LTD

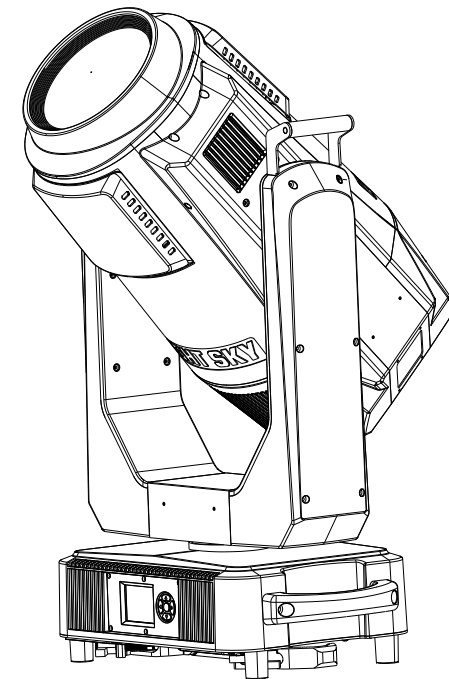

F1700WB 使用说明书 USER MANUAL

Please read these user manual carefully before use!
使用前请仔细阅读本产品使用说明书!

LIGHT SKY®

Tel:0086-20-61828288

Fax:0086-20-61828188 Pc:510800

Web:www.lightsky.com.cn

E-mail: flydragon@lightsky.com.cn

asia@lightsky.com.cn

india@lightsky.com.cn

europa@lightsky.com.cn

latinamerica@lightsky.com.cn

middle-east@lightsky.com.cn

american@lightsky.com.cn

Address: No. 43, Yunfeng Road, Xiuquan Street,
Huadu District, Guangzhou, China

地址：广州市花都区秀全街云峰路43号



LIGHT SKY®



CHANNEL FUNCTION/ 通道功能

Channel / 通道	Value / DMX数值	Percentage / 百分比	Function / 功能	Note/ 备注
1	0-255	0-100	Pan/水平	
2	0-255	0-100	Pan Fine/水平微调	
3	0-255	0-100	Tilt/垂直	
4	0-255	0-100	Tilt fine/垂直微调	
5	0-255	0-100	Pan/Tilt speed	
6	0-9		Reserved (0=default)/保留 (0 = 默认值)	
	10-14		RESET ALL/所有功能复位	
	15-19		RESET DIMMER SHUTTER/调光频闪复位	
	20-24		RESET COLOR/COLOR复位	
	25-29		RESET FRAMING/切割模组复位	
	30-34		RESET PT/水平垂直轴复位	
	35-39		RESET ZOOM/调焦缩放复位	
	40-44		LAMP ON/开灯泡	
	45-49		LAMP OFF/关灯泡	
	50-54		Always/背光常亮	
	55-59		Auto (30S)/背光自动(30S)	
	60-64		POWER MODE 1200W/功率模式1200W	
65-69		POWER MODE 1400W/功率模式1400W		
70-74		POWER MODE 1700W/功率模式1700W		
75-255		Reserved/保留		
7			Shutter/ strobe/频闪	
	0 - 31		Shutter closed/关闭频闪	
	32 - 63		Shutter open (32=default)/打开频闪 (32 = 默认值)	
	64 - 95		Strobe-effect from slow to fast/同步频闪 (由慢至快)	
	96 - 127		Shutter open/打开频闪	
	128 - 143		Opening pulse in sequences from slow to fast/脉冲开启 (由慢至快)	
	144 - 159		Closing pulse in sequences from fast to slow/脉冲关闭 (由快至慢)	
	160 - 191		Shutter open/频闪 开	
192 - 223		Random strobe-effect from slow to fast/随机频闪效果 (由慢至快)		
224 - 255		Shutter open/频闪开启		
8	0 - 255	0-100	Dimmer/调光	
9	0 - 255	0-100	Dimmer fine/调光微调	
10	0 - 255	0-100	CTO/降色温	
11			Colour wheel/色盘	
	0 - 89		0 - 360°	
	90 - 99		OPEN	
	100 - 109		COLOR1	
	110 - 119		COLOR2	
	120 - 129		COLOR3	
	130 - 139		COLOR4	
	140 - 149		COLOR5	
150 - 159		COLOR6		
160 - 169		COLOR7		

Channel / 通道	Value / DMX数值	Percentage / 百分比	Function / 功能	Note/ 备注
11	170 - 179		COLORS	
	180 - 214		Rotate clockwise, slow to fast/顺时针自转, 慢到快	
	215 - 249		Rotate counterclockwise, fast to slow/逆时针自转, 快到慢	
	250 - 255		random color/随机颜色	
12	0 - 255	0-100	Blade UP/叶片上	
13	0 - 255	0-100	Blade DW/叶片下	
14	0 - 255	0-100	Blade LF/叶片左	
15	0 - 255	0-100	Blade RF/叶片右	
16	0 - 255	0-100	Framing Rot./切割旋转	
17			Framing Mac./切割宏	
	0 -- 10		NO function/无功能	
	11 -- 20		Square/正方形	
	21 -- 30		Rectangle/长方形	
	31 -- 255		Reserved/保留	
18	0 - 255	0-100	Framing Mac. Zoom/切割宏缩放	
19	0 - 255	0-100	Zoom/缩放	
20	0 - 255	0-100	Focus/调焦	
21	0 - 255	0-100	Focus Fine/调焦微调	
22	0-255	0-100	Auto Fin./自动微调	
23			Auto Dis./自动距离	
	0 - 9		NO function/无功能	
	10 -- 19		10M	
	20 -- 29		15M	
	30 -- 39		20M	
	40 -- 49		30M	
	50 -- 59		40M	
	60 -- 255		50M	
24			Frost1 / 雾化1	
	0 - 127		Minimum atomization to maximum atomization/最小雾化到最大雾化	
	128 - 159		Slow in and fast out from slow to fast/慢进快出 从慢到快	
	160 - 191		Fast in and slow out from slow to fast/快进慢出 从慢到快	
	192 - 255		Slow in Slow out from slow to fast/慢进慢出 从慢到快	
25			Frost2/ 雾化2	
	0 - 127		Minimum atomization to maximum atomization/最小雾化到最大雾化	
	128 - 159		Slow in and fast out from slow to fast/慢进快出 从慢到快	
	160 - 191		Fast in and slow out from slow to fast/快进慢出 从慢到快	
	192 - 255		Slow in Slow out from slow to fast/慢进慢出 从慢到快	