


LiGHT SKY
FLY DRAGON LIGHTING EQUIPMENT CO.,LTD

SUPER SCOPE II

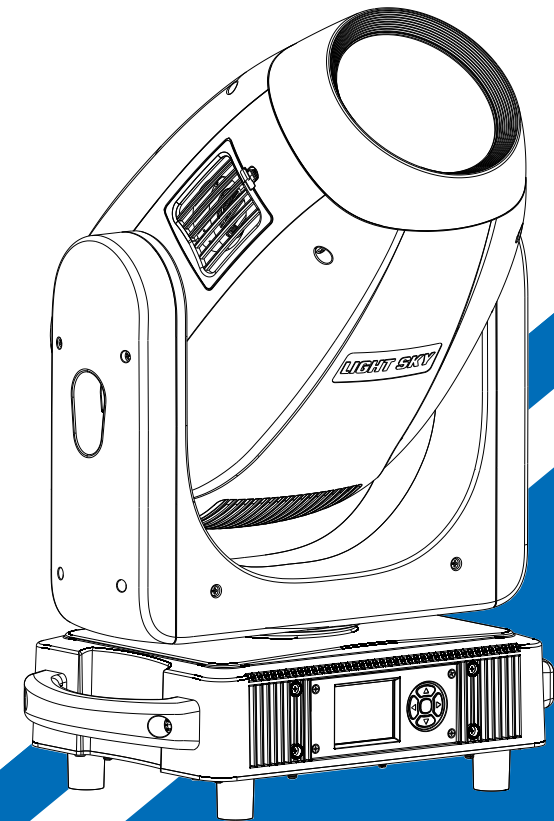

LiGHT SKY

Web: www.lightsky.com.cn

Tel: 0086-20-61828288

Fax: 0086-20-61828188 Pc: 510820

E-mail: flydragon@lightsky.com.cn

Address: No. 4, Jingneng Road 1,
Huadu District, Guangzhou, China



WWW.LIGHTSKY.COM.CN

User Manual

Please read the instruction carefully before use

CONTENTS

1. Safety Instructions.....	2
2. Technical Specifications	5
2.1. Attachment And Size	7
3.Color/Gobo/Prism	10
3.1.Replacing Rotating Gobos	11
4. Control Panel	13
5. Connection and control	14
5.1. Power supply connection.....	14
5.2. DMX 512 Connection.....	15
6. How To Set The Unit	16
6.1. Main Function.....	16
6.2. Channel Setting.....	18
6.3. Address Setting.....	18
6.4. DMX 512 Configuration	19
7. Electrical Connection Diagram	25
8. Troubleshooting.....	26
9. Fixture Cleaning.....	28
10. Duty exonerative and copyright protectio.....	28

Congratulations on choosing our company product! We thank you for your custom.

- ◆ Please keep in mind that this product, like other products of the company, adheres to the concept of people-oriented design and manufacture, and takes product quality as the foundation.
- ◆ We put the interests of customers first, and do our best to meet customer requirements.
- ◆ Please read this instruction manual carefully and keep it for future reference. In the case of fully understanding the product information, strictly abide by theUse the instruction manual to ensure that the product is installed, used and serviced correctly and safely.
- ◆ Our company is not responsible for any damage to lamps or other performance due to personal failure to follow the instructions during installation, use and maintenance.responsibility.
- ◆ Our company reserves the right to modify the manual at any time and without prior notice.

1.Safety Instructions



Please read the instruction carefully which includes important information about the installation, usage and maintenance.

WARNING

Please keep this User Manual for future consultation. If you sell the unit to another user, be sure that they also receive this manual.

The following symbols are used to identify important safety information on the product and in this manual:

DANGER! Safety hazard. Risk of severe injury or death.	DANGER! Refer to manual before installing, powering or servicing.	DANGER! Hazardous voltage. Risk of severe or lethal electric shock.	Warning! Fire hazard.	Warning! Burn hazard. Hot surface. Do not touch.	Warning! Risk of eye injury. Safety glasses must be worn.	Warning! Risk of hand injury. Safety gloves must be worn.	Avoid direct eye contact
Applies only to luminaires directly mounted on surfaces of non-combustible materials	Do not discard Trash can	Mark of ground	Replace all shatter shields	Take a short distance from the object to be photographed (meters)	Rated maximum ambient temperature	Indoor use only	Do not point the lens towards the sun or strong light
							Operation not allowed during runtime

Important:

Damages caused by the disregard of this user manual are not subject to warranty.

The dealer will not accept liability for any resulting defects or problems.

- Unpack and check carefully to ensure that there is no transportation damage before using the unit.
- This product is for indoor use only. Use only in a dry location.
- Do install and operate by qualified operator.
- The light source in this luminaire should be replaced by the manufacturer or its service agent or a similarly qualified person, always cut off the power supply before replacing the light source.
- Do not allow children to operate the fixture.
- Use safety chain when fixing the unit. Handle the unit by carrying its base instead of head only.

- The unit must be installed in a location with adequate ventilation, at least 20cm from adjacent surfaces.
- Be sure that no ventilation slots is blocked, otherwise the unit will be overheated.
- Before operation, ensure that you are connecting this product to the proper voltage in accordance with the specifications in this manual or on the product's specification label.
- It's important to ground the yellow/green conductor to earth in order to avoid electric shock.
- Minimum ambient temperature Ta: -10°C. Maximum ambient temperature Ta: 45°C.
Do not operate this product at a lower or higher temperature.
- Do not connect the device to any dimmer pack.
- When the lamp is running, do not place combustible objects next to it. The shortest distance between the device and inflammable and explosive objects or materials is 0.5m.
- Make sure the power cord is not crimped or damaged; replace it immediately if damaged.
- Unit's surface temperature may reach up to 80°C. do not touch the housing bare-handed during its operation.
- Avoid any flammable liquids, water or metal from entering the unit. Once it happens, cut off the mains power immediately.
- Do not operate in a dirty or dusty environment. do clean the fixture regularly.
- Do not touch any wire during operation as there might be a hazard of electric shock.
- Avoid entanglement of the power cord with other wires.
- The minimum distance to objects/surface must be more than 3 meters.
- In the event of serious operating problem, stop using the unit immediately.
- Never turn on and off the unit time after time.
- The housing, the lenses, or the ultraviolet filter must be replaced if they are visibly damaged.
- Do not open the housing as there are no user serviceable parts inside.
- Do not attempt to operate this unit if it becomes damaged. do not attempt any repairs yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center if needed.
- Disconnect this product from its power source before servicing.
- Do use the original packaging if the device is to be transported.
- Avoid direct eye exposure to the light source while the product is on.

- Do not operate this product if you see damage on the housing, shields, or cables.
Have the damaged parts replaced by an authorized technician at once.

Installation:

The fixture should be fixed on the clamp. Always ensure that the unit is firmly fixed to avoid vibration and slipping off during operation. Ensure that the trussing or area of installation must be able to hold 10 times the weight without any deformation. Always install a safety cable that can hold at least 12 times the weight of the fixture when installing. do install and operate by qualified operator. It must be installed in a place where there is out of the reach of people.

2. Technical Specifications

OPTICS

- Light source: 520W white LED module
- Optical angle: 3.8 ° -50 °
- Optical lens: coated with high anti reflective film, with a diameter of 140mm
- Color temperature: 7000 K
- Color rendering index: RA ≥ 72 (High CRI filter up to 88)
- Light intensity: 24500 Lux@10m
- Luminous flux: 20000 Lm
- LED source life expectancy: 40000 hours

(*LED source life depends on several factors, including but not limited to: environmental conditions, control dimming, power supply and voltage, switching cycle, fixture mode, etc.)

COLOUR

- CMY infinite color mixing
- CTO color temperature linear adjustment (3000K-7000K)
- 6 color chips+white light+1 CRI, can achieve bidirectional color rainbow, dual color step gradient (linear movement), color wheel bidirectional rotation, random color mode.

PATTERN

- Double rotating pattern disc: 7+7 glass patterns+white circles, can be plugged and replaced, can achieve self rotation, flowing water, and shaking effects. The outer diameter of the pattern disc is 22.9mm, and the inner diameter of the pattern disc is 15mm.
- Effect disk: can achieve flowing effects.
- Eight way cutting: 4 gratings achieve fast and smooth cutting, and the eight cutting directions and angles can be individually controlled. Each single piece can achieve complete light closure, and the entire cutting module can rotate $\pm 60^\circ$.

EFFECT

- Prism: 4 rows of prisms+4 prisms, can rotate in both directions
- Soft light effect: mild atomization+severe atomization, adjustable independent soft light effect
- Equipped with electric aperture, 5-100% linear adjustment, with macro functions and multi effect changes
- Electronic dimming, 0-100% linear dimming, uniform spot
- The electronic strobe speed is 0.5-25 times/second
- LED refresh rate: 1000Hz~25KHz

CONTROL AND PROGRAMMING

- Control channel: 42CH、54CH ,Please refer to the channel table for details
- Protocol: Standard DMX512 protocol, RDM protocol, ArtNet protocol
- Data connection: Three core or five core signal input/output
- Display: LCD screen

SOFTWARE

- Upgrade software through USB or DMX interface
- Intelligent temperature control ensures LED lifespan
- Silent fan, three working modes (high Output/standard/silent)

X, Y AXIS MOVEMENT

- X axis: 540° 8bit/16bit precision scanning
- Y axis: 270° 8bit/16bit precision scanning
- Reset function with automatic error correction
- Fixed lock: horizontal/vertical lock

POWER AND POWER

- Input voltage rangr: AC 100-240V ~ 50/60Hz
- Maximum power:960W
- Power factor: 0.99
- Maximum lamp current: 9.6 A/100V; 4.36 A/220V

SIZE AND WEIGHT

- Size:442mm×267mm×656mm
- Carton packing (default): 495mm×345mm×775mm
- N.W: 28.3 kg G.W: 34.7 kg (include foldable clamp)
- Flycase (2 sets): 730mm×575mm×850mm
- N.W.: 56.6 kg G.W.: 97.9 kg


OTHER

- Protection class: IP20
- Working environment: -10℃ ~ 45℃
- Maximum surface temperature of the lamp body: 80℃

APPROVALS


- The product implementation standard: GB/T 7000.1-2023 、 GB/T 7000.217-2023
- Approved certifications: CE、RoHs
- The product complies with the following EU directives:
- Low Voltage Directive 2014/35/EU . EMC Directive 2014/30/EU

illumination diagram

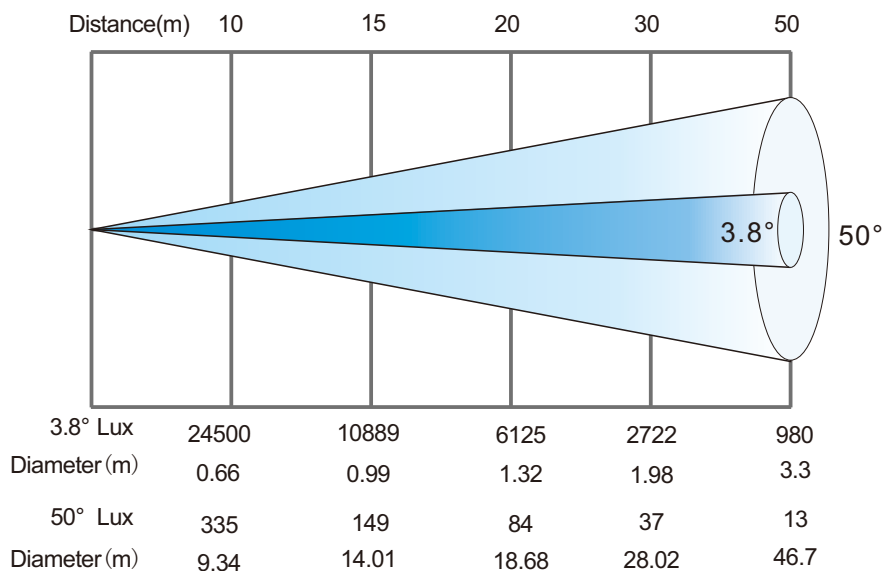

2.1.Attachment And Size

Attachment contents-Fig.1

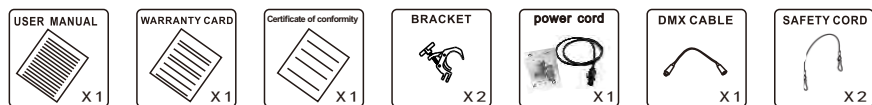

Technical drawings of the Lazer-Armory 6000, showing front, side, top, and rear views with dimensions in inches and millimeters.


Front View: Dimensions include 406 (width), 328 (height), 295 (height), 136 (height), and 408 (height).

Side View: Dimensions include 465 (width), 123 (width), 540 (height), and 656 (height).

Top View: Dimensions include 442 (width), 257 (width), 287 (height), and 600 (width).

Rear View: Dimensions include 406 (width), 519 (height), and 763 (height).

Bottom View: Dimensions include 406 (width), 519 (height), 763 (height), 656 (height), 465 (width), 18.3" (width), 20.4" (width), 25.8" (height), 21.3" (height), 25.5" (height), and 23.6" (width).

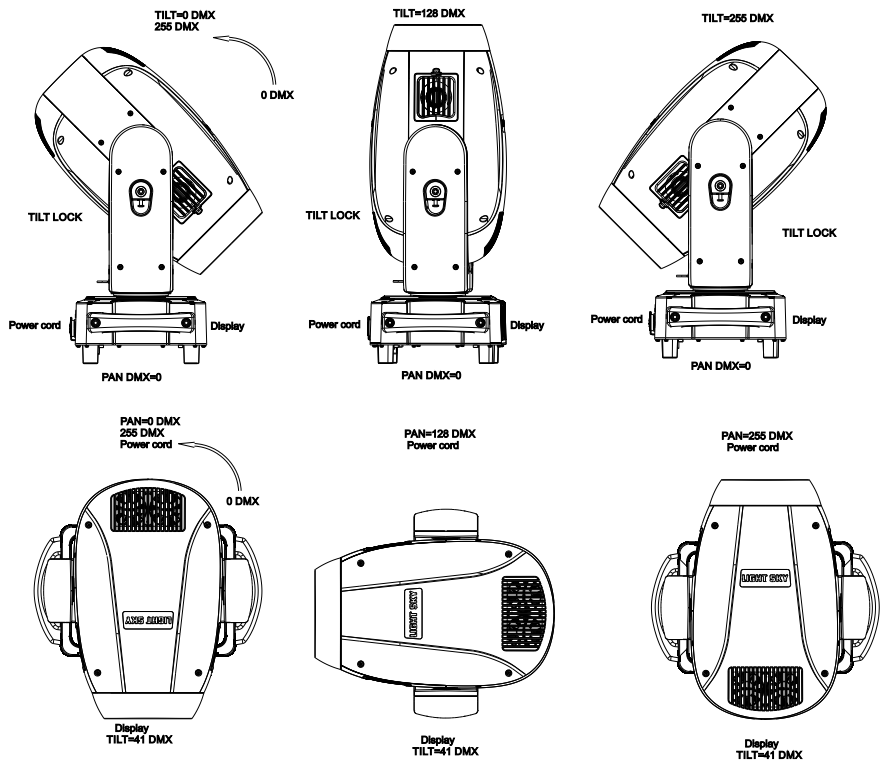

3.Color/Gobo/Prism


CMY-color wheel-Effect disc



C





M

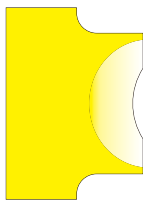


Y




CTO

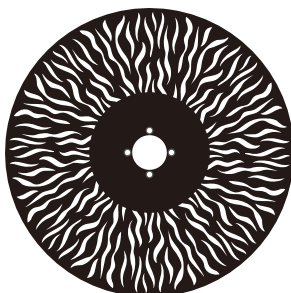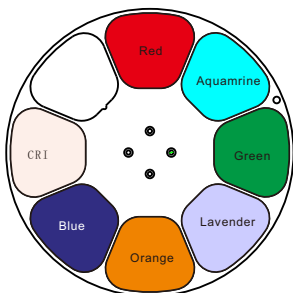

Pattern

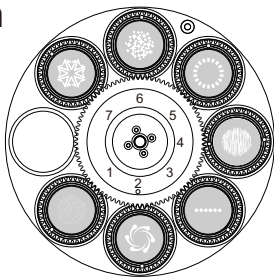


Rotating gobo wheel 1

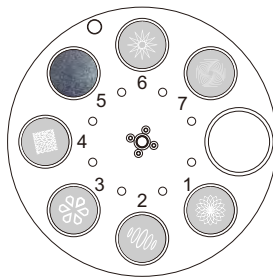


Rotating gobo wheel 2

Attention: When installing GOBO chips, it is necessary to strictly follow the order of the pictures and not change the original order and direction of the GOBO chips at will.

Prism

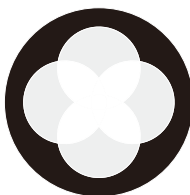


4 Prism

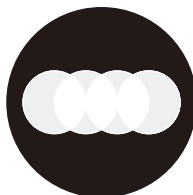


4 Prism

3.1.Replacing Rotating Gobos


1.Use a screwdriver to unscrew the two screws at [A] to take out the pattern color module assembly.

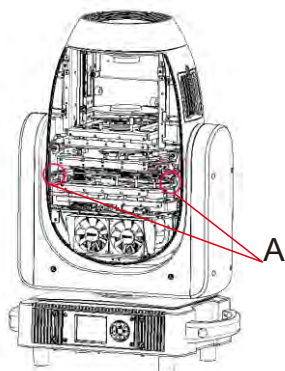


2.Remove the screws at 【 B 】 to remove the rotating pattern plate.

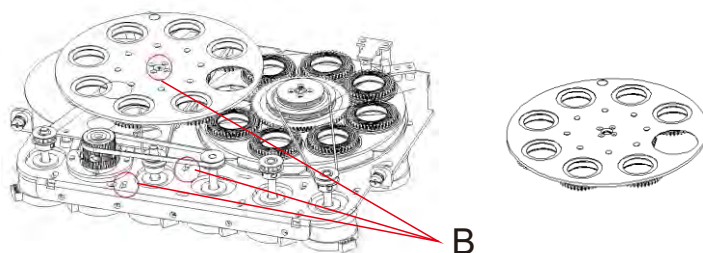


3.Remove the screws at [C] to remove the rotating pattern plate 2.

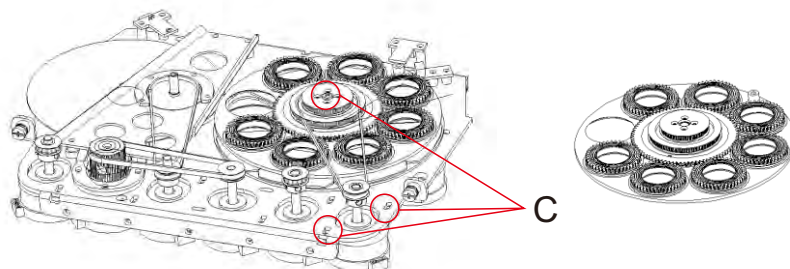


4. As shown in 【 D 】 , gently lift the pattern plate from the edge of the moving wheel and slowly pull it out to remove a single pattern plate.

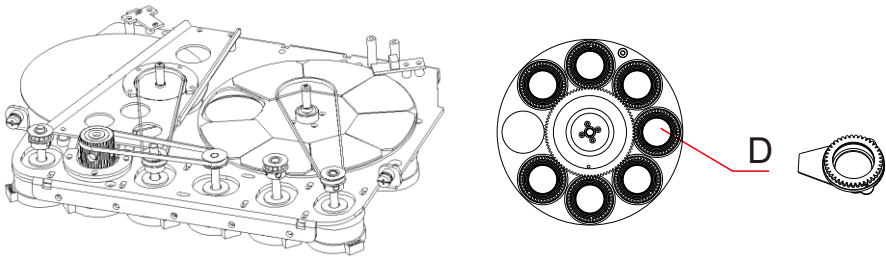

5. Use tweezers or other small gripping objects to remove the snap ring at position [E] (if the pattern piece is coated with glass glue for fixation, use a professional cleaning agent to remove the glass glue before removing the snap ring to avoid damaging the pattern piece). When assembling the pattern piece, avoid touching it directly with your hands, and as shown in [F], the coating surface of the pattern piece should face the direction of the light source

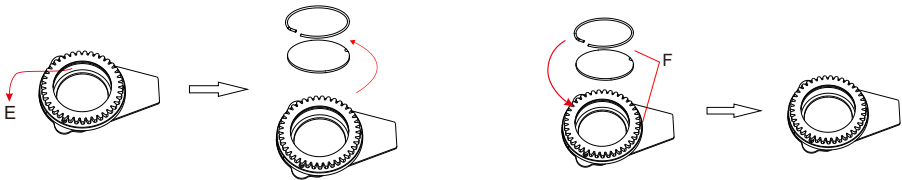


6. Insert the pattern piece from the driving wheel into the driving wheel assembly, as shown in 【 G 】 . When positioning the pattern piece from the concave point of the driving wheel, it must face the center of the driving wheel

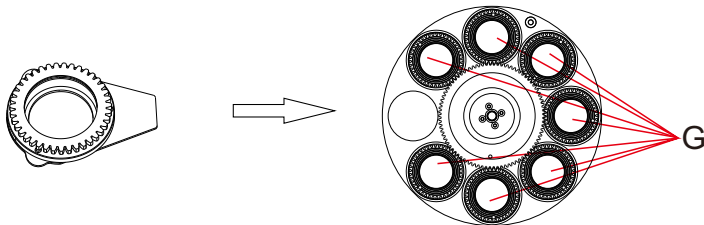

7. After installation, simply install the pattern disk component back onto the lamp.

4.Control Panel

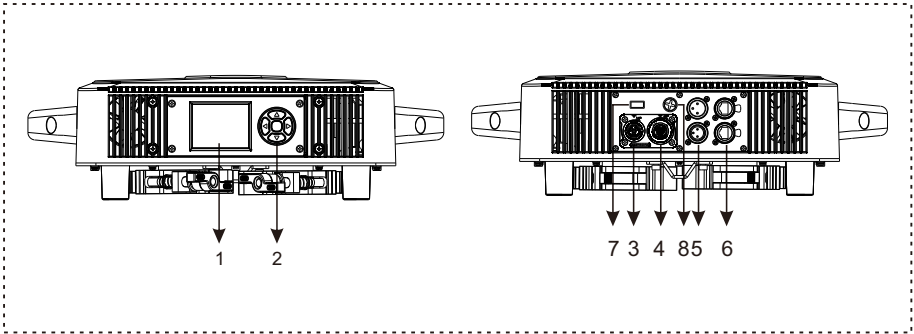

1. Display: To show the various menus and the selected function.

2. Button:

	OK confirmation key
	UP
	DOWN
	To the left
	To the right

3. Socket version power input: connect the power supply.

4. Power output: Connect the lamp power output adapter.

5.DMX input/output: Used for DMX512 connection, use 3/5 core XLR signal cable to connect console and lamps, And input/output DMX signal.


6.Art-net: The information of the lamp can be transmitted to the main controller through the network cable, and the lamp can be controlled through RJ45(optional).

7.Firmware upgrade: Used to upgrade the fixture's firmware.

8.Fuse holder: Used for the bottom box battery pack power supply display board when not powered on.(Note: In the case of air transportation, the lighting fixtures will require disassembly of fuses for shipment, and they must be installed by themselves upon receipt.)


5.Connection and control

5.1.Power supply connection

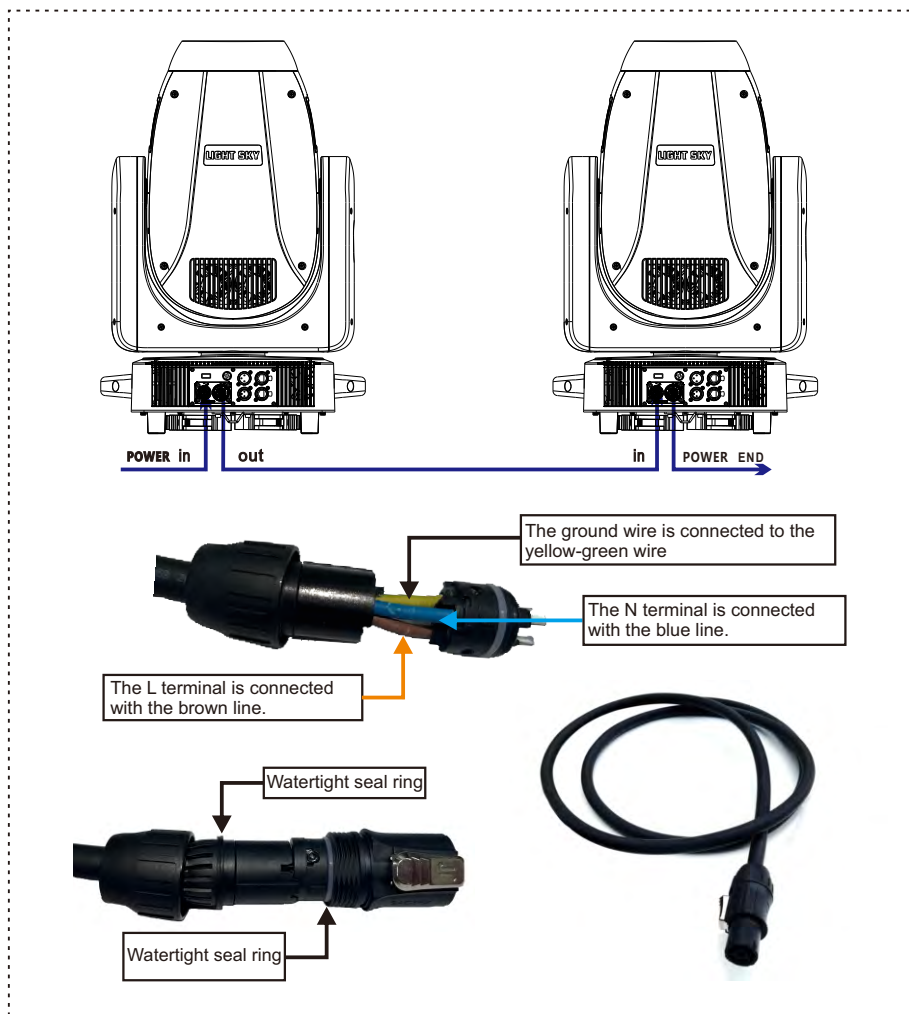

- The bus connecting the power supply must be installed by a qualified professional technician.
- After completing all the above operations and ensuring that it is installed, you can power on the lamp to operate.

5.2.DMX 512 Connection

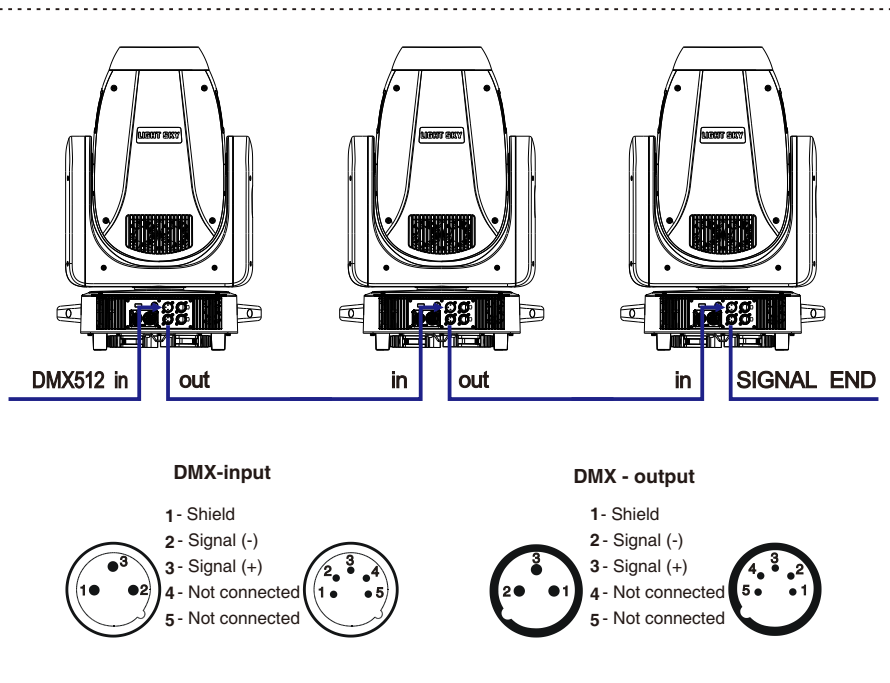

1. At last unit, the DMX cable has to be terminated with a terminator. Solder a 1200hm 1/4W resistor between pin 2(DMX-) and pin 3(DMX+) into a 3-pin XLR-plug and plug it in the DMX-output of the last unit.

2. Connect the unit together in a "daisy chain" by XLR plug cable from the output of the unit to the input of the next unit. The cable cannot be branched or split to a "Y" cable. DMX 512 is a very high-speed signal. Inadequate or damaged cables, soldered joints or corroded connectors can easily distort the signal and shut down the system.

3. The DMX output and input connectors are pass-through to maintain the DMX circuit, when one of the units' power is disconnected.

4. Each lighting unit needs to have a DMX address to receive the data by the controller. The address number is between 1-512.

5. The end of the DMX 512 system should be terminated to reduce signal errors.

6. 3 pin XLR connectors are more popular than 5 pins XLR.

3 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+)

5 pin XLR: Pin 1: GND, Pin 2: Negative signal (-), Pin 3: Positive signal (+), Pin4, Pin5 not used.

6.How To Set The Unit

6.1.Main Function

After powering on, press OK to enter the preset menu interface, and use the left/right keys to select: DMX settings, device information, personal settings, manual, test equipment, and service options.

Main menu	I menu	II menu	III menu	IV menu
DMX SETTING	Address	→ 1-512		
	Channel mode	→ Standard (42)		
		→ Extended (54)		
	Dmx state	→ Black		
		→ Hold		
		DMX 512		
	Input mode	→ Art-Net		The Art Net option only appears when connected to a network board
Info	Fixture times	→ Power on time	0 - 99999H	
		→ LED on time	0 - 99999H	
		→ All time	0 - 99999H	
	Temperatures	→ LED TEMP		
		→ Drive TEMP		
	RDM info	→ UID:0x3888XXXXXXXX		
	DMX live	→ 1.Pan	0 - 255	
		→ 2.Pan fine	0 - 255	
		→ 3.....	0 - 255	
	Version info	→ Display	VX.XXX	
		→ Pan/Tilt	VX.XXX	
		→ CMY module	VX.XXX	
		→ Gobo module	VX.XXX	
		→ Profile	VX.XXX	
		→ Zoom module	VX.XXX	
		→ LedFanDrv	VX.XXX	
	Fan Info	→ InFan		
		→ OutFan		
		→ GoboFan		
		→ FocusFan		
		→ InFan1		
		→ InFan2		
		→ OutFan1		
		→ OutFan2		
		→ GoboFan		
		→ FocusFan1		
Person	Pan/Tilt	→ PT swap	OFF ON	
		→ Pan invert	OFF ON	
		→ Tilt invert	OFF ON	
	Noise mode	→ Silent		
		→ Standard		
		→ High Output		
	Display	→ Language	English Chinese	
		→ Backlight time	Always Auto (30S)	
		→ Intensity	0 - 100	
		→ Normal		
		→ Rotation	Rotate 180 Auto	
	Art-Net	→ IP Address	***.***.***.***	This menu can only be displayed when connected to the artnet module
		→ Mask Address	***.***.***.***	
		→ Net Address	0-127	
		→ Sub Net Address	0-15	
	Dimmer Curve	→ Universe Address	0-15	
		→ Linear		
		→ Square(Default)		
		→ I-Square		
		→ SCurve		
		→ 1000 Hz		

Main menu	I menu	II menu	III menu	IV menu
	Led Preq Set	3600 Hz		
		7200 Hz		
	Zomm Invert Set	25000 Hz(Default)		
		OFF		
Manual	Manual Control	ON		
		1.Pan	0 - 255	
		2.Pan fine	0 - 255	
	Reset	3.....	0 - 255	
		Total reset		
		Pan/Tilt reset		
		Gobo reset		
		Color reset		
		Profile reset		
		Focus reset		
		Effect reset		
Test	Test all	Testing		
	Test pan/ tilt	Testing		
	Test effects	Testing		
Service	Fixture state	Memory IC	OK/Reset/Error	
		Angle Sensor	OK/Reset/Error	
		Pan Encodeer	OK/Reset/Error	
		Tilt Encoder	OK/Reset/Error	
		Pan	OK/Reset/Error	
		Tilt	OK/Reset/Error	
		Cyan	OK/Reset/Error	
		Magenta	OK/Reset/Error	
		Yellow	OK/Reset/Error	
		CTO	OK/Reset/Error	
		Colorwheel	OK/Reset/Error	
		Gobo1	OK/Reset/Error	
		Gobo1 Rot.	OK/Reset/Error	
		Gobo2	OK/Reset/Error	
		Fram Rot.	OK/Reset/Error	
		Zoom	OK/Reset/Error	
		Focus	OK/Reset/Error	
		Prism1	OK/Reset/Error	
		Prism2	OK/Reset/Error	
		Prism Rot.	OK/Reset/Error	
	Adjust	Pan	0 - 255	
		Tilt	0 - 255	
		0 - 255	
	Factory	Factory Reset	YES / NO	
		Reset timers	Reset power on timers	YES/NO
			Reset led timers	YES/NO
			Reset all timers	YES/NO
			Simple update	Display
				Pan/Tilt
				CMY module
				Gobo module
				Framing module
				Zoom module
				LEDQD
		Update	Whole update	ALL
				Display
				Pan/Tilt
				CMY module
				Gobo module
				Framing module
				Zoom module
				LEDQD
				ALL
		Power select		
		Logo select		
		Fixture Type		

6.2.Channel Setting

Enter the MENU menu, select the Personal Settings function, select the channel mode, press the OK button to confirm, you can use the up and down keys to select:42 channels (default), 54channels, Press the OK key to enter the selection confirmation and return to the previous menu.

6.3.Address Setting

Enter MENU, select the DMA setting function, select the address code setting, press the OK button to confirm, and the current DMA address will be displayed in the On screen display. Use the up/down buttons to select addresses 001-512, press the OK button to save the current address code, and return to the previous menu level.

Please refer to the following diagram to address your DMX512 channel for the first 4 units.

Channel mode	Unit 1 Address	Unit 2 Address	Unit 3 Address	Unit 4 Address
42 CH	1	43	85	127
54 CH	1	55	109	163

6.4.DMX 512 Configuration

Please control the fixture by referring to the configurations below

54 Channel	42 Channel	DMX	Function	Note
1	1	0-255	Pan Pan movement/positioning	
2	2	0-255	Pan fine Fine Pan movement/positioning	
3	3	0-255	TILT Tilt movement/positioning	
4	4	0-255	TILT fine Fine Tilt movement/positioning	
5	5	0-255	PAN TILT Speed Pan Tilt movement Speed From Fast To Slow	
6	6	0 - 10 NO function 11 -- 20 All Reset 21 -- 30 XY Reset 31 -- 40 Color System Reset 41 -- 50 Gobo System Reset 51 -- 60 Profile System Reset 61 -- 70 Focus System Reset 71 -- 80 Noise mode:Silent 81 -- 90 Noise mode:Standard(Default) 91 -- 100 Noise mode:High Output 101 -- 110 Effect Reset 111 -- 115 LED frequency:1000HZ 116 -- 120 LED frequency:3600HZ 121 -- 125 LED frequency:7200HZ 126 -- 130 LED frequency:25000HZ(Default) 131 -- 135 Dimmer Curve:Linear 136 -- 140 Dimmer Curve:Square(Default) 141 -- 145 Dimmer Curve:l-Square 146 -- 150 Dimmer Curve:S-Curve 151 -- 155 Zoom Invert 156 -- 160 Zoom Forward (Default) 161 -- 165 Dmx state black(Default) 166 -- 170 Dmx state hold 171 -- 180 Display Back light is Always 181 -- 190 Display Back light is Auto(Default) 191 -- 200 Function Open 201 -- 255 NO function		
7	7	0--255	Cyan White→full cyan	
8	/	0--255	Cyan Fine Cyan Fine movement/positioning	

54 Channel	42 Channel	DMX	Function	Note
9	8	0--255	Magenta White → full magenta	
10	/	0--255	Magenta Fine Magenta Fine movement/positioning	
11	9	0--255	Yellow White→ full yellow	
12	/	0--255	Yellow Fine Yellow Fine movement/positioning	
13	10	0--255	CTO Color Temperature from Deep to mall	
14	/	0--255	CTO Fine CTO Fine movement/positioning	
15	11	0 - 89 90 - 100 101 - 111 112 - 122 123 - 133 134 - 144 145 - 155 156 - 166 167 - 179 180 - 214 215 - 249 250 - 255	Colour wheel 0 - 360° OPEN COLOR1 COLOR2 COLOR3 COLOR4 COLOR5 COLOR6 COLOR7 Forwards Color rotation from slow to fast Backwards Color rotation from fast to slow Random Color	
16	12	0 - 9 10-19 20 - 29 30 - 39 40 - 49 50 - 59 60 - 69 70-79 80-87 88-95 96-103 104-111 112-119 120-127 128-135 136-139	Gobo Open GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7 Gobo 1 shake slow to fast Gobo 2 shake slow to fast Gobo 3 shake slow to fast Gobo 4 shake slow to fast Gobo 5 shake slow to fast Gobo 6 shake slow to fast Gobo 7 shake slow to fast Open	


54 Channel	42 Channel	DMX	Function	Note
		140 - 194 195 - 249 250 - 255	Forwards gobo rotation from slow to fast Backwards gobo rotation from fast to slow Random Gobo	
17	13	0 - 127 128 - 189 190 - 193 194 - 255	Gobo Rotation 0° - 360° Forwards gobo rotation from fast to slow Gobo rotation stop Backwards gobo rotation from slow to fast	
18	14	0 - 9 10-19 20 - 29 30 - 39 40 - 49 50 - 59 60 - 69 70-79 80-87 88-95 96-103 104-111 112-119 120-127 128-135 136-139 140 - 194 195 - 249 250 - 255	Gobo2 Open GOBO1 GOBO2 GOBO3 GOBO4 GOBO5 GOBO6 GOBO7 Gobo 1 shake slow to fast Gobo 2 shake slow to fast Gobo 3 shake slow to fast Gobo 4 shake slow to fast Gobo 5 shake slow to fast Gobo 6 shake slow to fast Gobo 7 shake slow to fast Open Forwards gobo rotation from slow to fast Backwards gobo rotation from fast to slow Random Gobo	
19	15	0 - 127 128 - 189 190 - 193 194 - 255	Gobo2 Rotation 0° - 360° Forwards gobo rotation from fast to slow Gobo rotation stop Backwards gobo rotation from slow to fast	
20	16	0 - 255	Blade1A Blade Out→In	
21	/	0 - 255	Blade1A Fine Fine Blade positioning	
22	17	0 - 255	Blade1B Blade Out→In	
23	/	0 - 255	Blade1B Fine Fine Blade positioning	

54 Channel	42 Channel	DMX	Function	Note
24	18	0 - 255	Blade2A Blade Out→In	
25	/	0 - 255	Blade2A Fine Fine Blade positioning	
26	19	0 - 255	Blade2B Blade Out→In	
27	/	0 - 255	Blade2B Fine Fine Blade positioning	
28	20	0 - 255	Blade3A Blade Out→In	
29	/	0 - 255	Blade3A Fine Fine Blade positioning	
30	21	0 - 255	Blade3B Blade Out→In	
31	/	0 - 255	Blade3B Fine Fine Blade positioning	
32	22	0 - 255	Blade4A Blade Out→In	
33	/	0 - 255	Blade4A Fine Fine Blade positioning	
34	23	0 - 255	Blade4B Blade Out→In	
35	/	0 - 255	Blade4B Fine Fine Blade positioning	
36	24	0 - 255	Framing Rotation 0° - 120°	
37	25	0 -- 10 11 -- 20 21 -- 30 31 -- 40 41 -- 50 51 -- 60 61 -- 70 71 -- 80 81 -- 90 91 -- 100 101 -- 110 111 -- 120 121 -- 130 131 -- 140 141 -- 150	Framing Macro No function Square rectangle Isosceles triangle trapezoidal The Fan(Facing Up) parallelogram Right Angle trapezoid The Fan(Down) triangle prismatic The stripes bar Upper left quadrant semicircle (Up)	

54 Channel	42 Channel	DMX	Function	Note
		151--160 161--170 171--180 181--190 191--200 201--255	Upper right quadrant Right semicircle Right lower quadrant Semicircle (Down) The lower left quadrant Left Semicircle	
38	26	0 - 255	Framing Macro Zoom Framing Macro Zoom	
39	27	0 - 10 11-100 101-255	Prism Prism Out Prism 1 Prism 2	
40	28	0 1--63 64-127 128-191 192-207 208-223 224-239 240-255	Prism Rotation No Function 0--360°/Linear adjust Forwards rotation from fast to slow Backwards rotation from slow to fast from slow to fast 90°Swing from slow to fast 180°Swing from slow to fast 270°Swing from slow to fast 360°Swing	
41	29	0 - 9 10 - 255	Effect Effect Out Effect In	
42	30	0 - 2 3 - 130 131 - 255	Effect Rotation No Function Forwards rotation from fast to slow Backwards rotation from fast to slow	
43	31	0 - 10 11-100 101 - 255	Frost Frost Out Frost1 Frost2	
44	32	0 - 127 128 - 159 160 - 191 192 - 255	Iris From Max To Min Slow In Fast Out from slow to fast Fast In Slow Out from slow to fast Slow In Slow Out from slow to fast	
45	33	0 - 255	Zoom NARROW BEAM→WIDE BEAM	

54 Channel	42 Channel	DMX	Function	Note
46	34	0 - 255	ZoomFine Fine Zoom positioning	
47	35	0 - 255	Focus Infinity→near	
48	36	0 - 255	Focus Fine Fine Focus positioning	
49	37	0 - 9 10 -- 19 20 -- 29 30 -- 39 40 -- 49 50 -- 59 60 - 69 70 - 79 80 -- 255	Autofocus Distance NO function 7M 10M 15M 20M 25M 30M 40M 50M	
50	38	0-255	Autofocus Adjustment Auto Focus Fine	
51	39	0-9 10-49 50-89 90-119 120 - 179 180-255	Strobe No Function Closing pulses in sequences from fast to slow Opening pulses in sequences from fast to slow No Function Random strobe,slow → fast Strobe,slow → fast	
52	40	0 - 255	Dimmer Dimmer from Dark To Bright	
53	41	0 - 255	Dimmer Fine Dimmer Fine	
54	42	0-15 16-255	Gobo Macro No Function Gobo Macro Function	

7. Electrical Connection Diagram

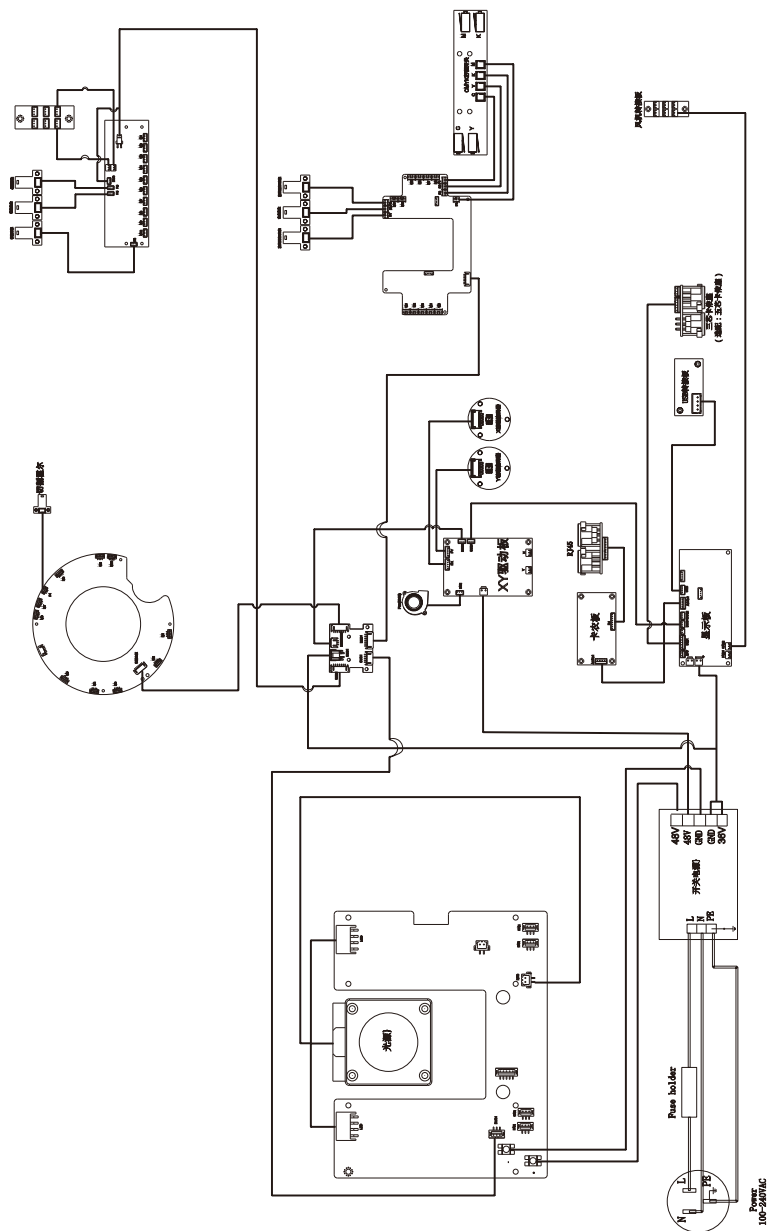

8. Troubleshooting

The following are common faults of lamps and corresponding solutions. Faults that cannot be repaired by yourself should be handled by professionally qualified personnel. Disconnect the power supply to the lamp during maintenance!

● The light source is not bright

- Check that a suitable light source is installed for the luminaire.
- Check whether the power supply connection of the lamp or the control switch is in poor contact.
- Check whether the light source has reached the end of its service life or is damaged, and replace it with a high-quality light source of the same specification.
- Measure whether the power supply is insufficient.
- Check whether the light source has not cooled down completely due to abnormal operation. Let the lamp cool down for more than 15 minutes to allow the light source to cool down. After returning to the normal start-up range, turn the power on again and it can be used normally.
- Check whether the DMX512 controller sends a command to turn on the light source.
- Check whether the light source and trigger circuit are disconnected or defective.
- Check whether the wiring terminals on the internal trigger are in poor contact and tighten the plug.
- Check the "Fan Speed and Voltage" in the "Basic Information" menu to see if the speed of FAN1/FAN2/FAN3 is above 500RPM. If it is below 500RPM, the light source will not light up. Replace the fan with the same specification.
- Check whether the over-temperature protection temperature switch inside the lamp is damaged. Go to the menu "Basic Information" and select "Equipment Temperature" to check - whether the temperature measuring plate shows that the temperature is too high or there is no temperature display.

● The beam appears dim and uneven

- The light source may have reached the end of its service life and does not emit enough light. Replace it with a light source of the same specification.
- Check whether there is dust accumulated in the optical part and clean it.
- Measure whether the power supply is insufficient.
- Finely adjust the screw device used to change the height of the lamp until the ideal light is achieved. Enter the menu "Service Options" and select "Calibration" to enter color and pattern adjustment, which can be adjusted to the center.

● The projected image is blurry

- Check whether the DMX512 controller channel value corresponding to the electronic focus system is suitable for the current projection distance.
- Check whether the mechanical part of the focusing system is stuck, remove the dust and add antifreeze and temperature-resistant lubricating oil.

● The light source of the lamp works intermittently

- Check whether the fan is running normally or is blocked by dust and paper debris.
- Check whether the inlet and outlet cooling air vents are blocked by dust.
- Check whether the lamp has reached the end of its service life.

- Check whether the power supply is insufficient, and whether the power switch and wiring are in poor contact or aging.

- Check whether the over-temperature protection temperature switch inside the lamp is damaged.

- **Although it emits light, the lamp does not accept instructions from the controller**

- Check whether the digital start address value and function options of the lamp are correct.

- Check whether the connection of the communication control line is correct. The communication line is too long or has been interrupted.

- Check whether the control equipment fails and whether the signal amplifier connected in series fails.

- Check whether the communication line is too long or if other devices interfere with each other.

- Optimize wiring, shorten the length of control signal lines, and route high-voltage and low-voltage lines separately

- Add signal amplifier isolator.

- The signal line is made of high-quality shielded twisted pair (impedance characteristic is 75Ω), and the signal terminal resistor is connected at the end of the lamp.

- Check that the circuit board communication IC or CPU is burned out because the bulb performs an abnormal operation when it is not completely cooled, causing the instantaneous ultra-high voltage leakage generated by the trigger, and replace the PCB board.

- **The lamp cannot be started**

- Check whether the power supply parameters match the lamps.

- Check whether the fuse at the light fixture's power input is blown.

- Check that the lamp has poor contact or falls off due to extrusion deformation, vibration of internal parts, moisture, etc. during long-distance transportation.

- Check whether the internal wires and connectors of the lamp are desoldered or loose.

- Check whether the electrical components of the lamp (such as power switch, transformer, ballast, capacitor, varistor, filter, power supply PCB board, motor control PCB board, etc.) are loose, short-circuited, burned out, etc.

- **Some functions of the lamp cannot accept controller instructions**

- Check whether the control device sends correct action instructions for these functions.

- Check whether the mechanical parts corresponding to these functions are loose or deformed.

- Check whether the motor sockets corresponding to these functions are loose or the corresponding driver chips are burned out.

- Check whether the motor wires corresponding to these functions are broken at the corners.

- Check whether the motors corresponding to these functions are damaged.

- **During operation, the X or Y direction of the lamp does not move normally**

- Click the previous step to check one by one.

- Check whether the corresponding drive belts in the X and Y directions of the lamp are detached or broken.

- Check whether the data feedback receiver (photoelectric sensor) corresponding to the X and Y directions in the lamp is damaged.

- Restart the computer and reset it once.

9. Fixture Cleaning

It is absolutely essential that the fixture is kept clean to ensure the maximum light-output and allow the fixture to function reliably throughout its life. The fixture must be cleaned regularly to avoid dust, dirt and smoke-fluid residues building up on or within the fixture. The cleaning frequency depends on the application environment. Clean the fixture immediately if the dust enters it to avoid damage to the optical lens due to excessive dust.

- * A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should solvents be used.
- * Always dry the parts carefully.
- * Clean the external optical lens at least every 20 days and the internal optical lens every 30 days.

CAUTION ! ! !

Disconnect from mains before starting maintenance operation.

10. Duty exonerative and copyright protectio

- * Light source belongs to consumption products, not within the scope of warranty.
- * The manufacturer shall not bear any responsibility for any damage caused by failure to operate in accordance with this instruction.
- * All the information in this manual shall be interpreted by the manufacturer.
- * All the information in this manual shall not be copied without permission.
- * The data contained in this statement are subject to change in the future without prior notice.